

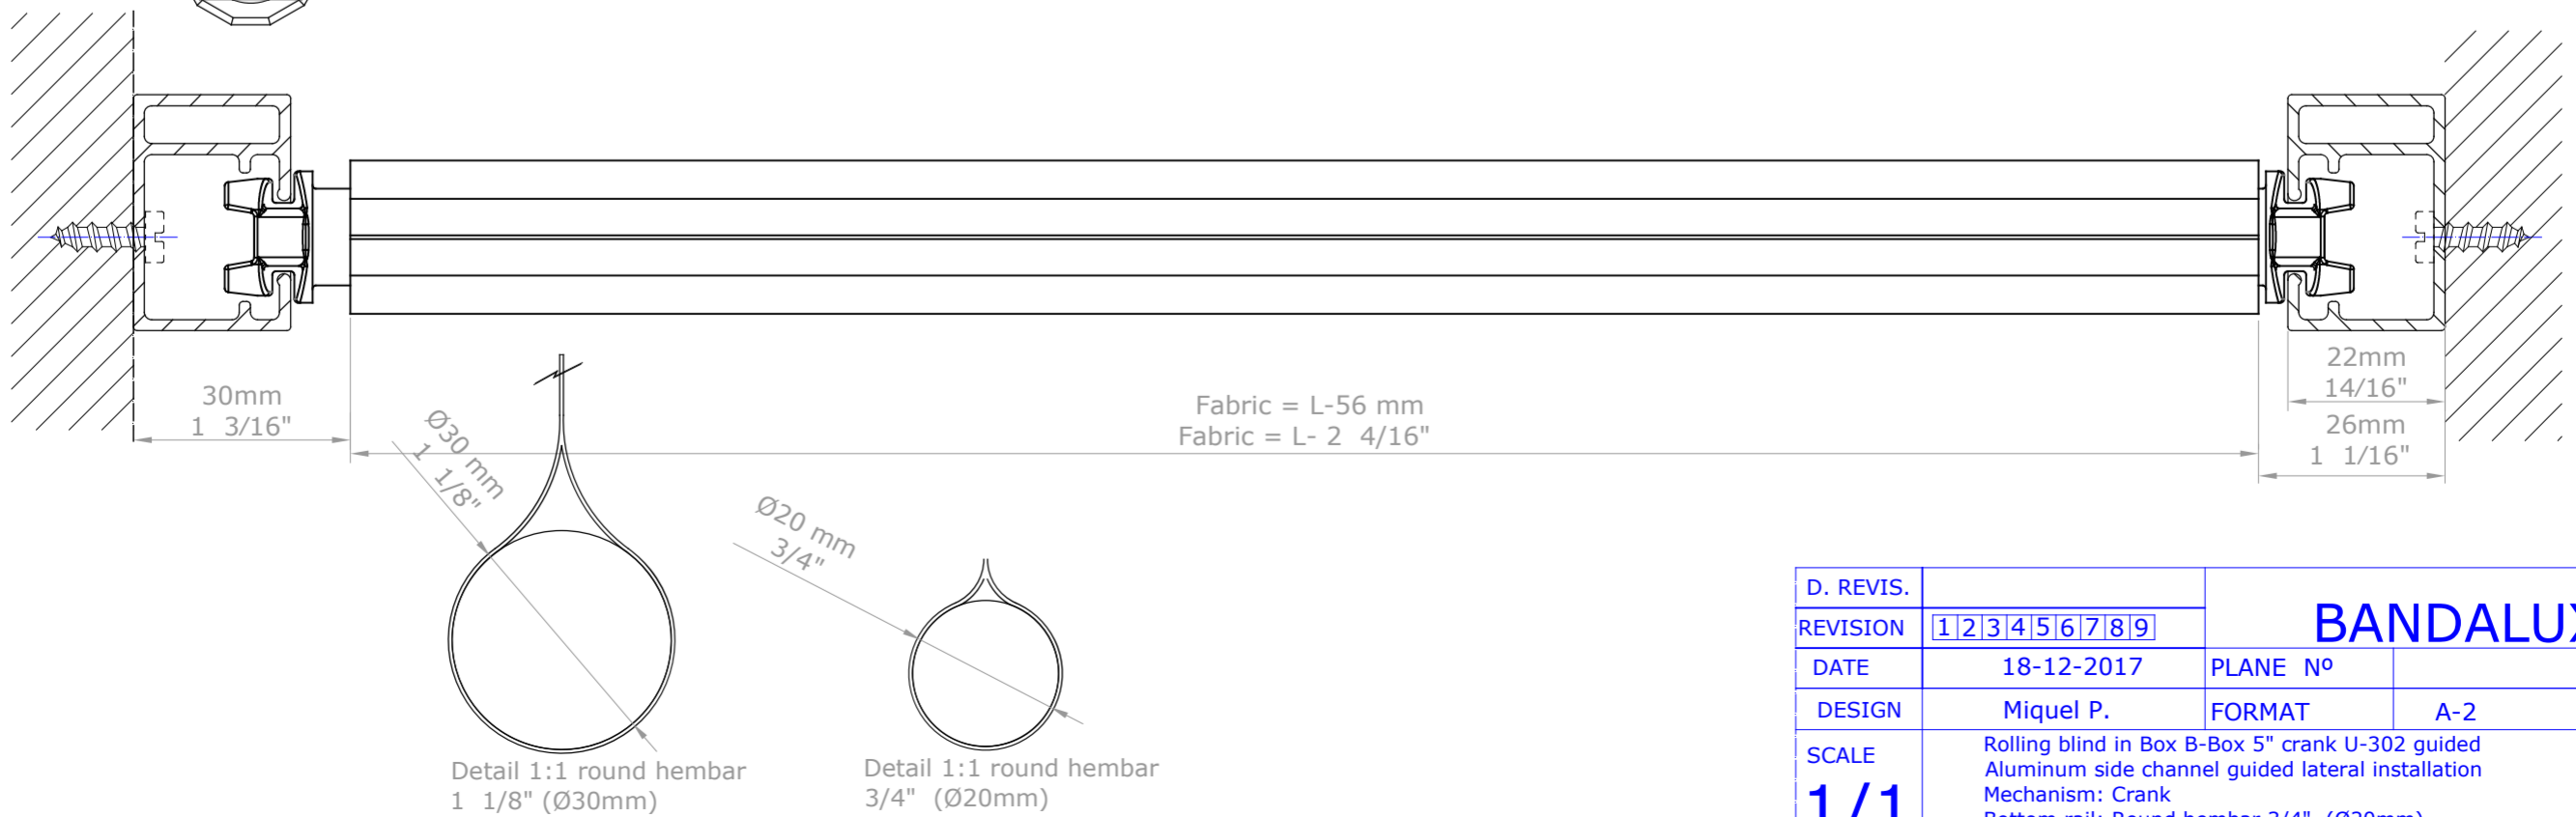
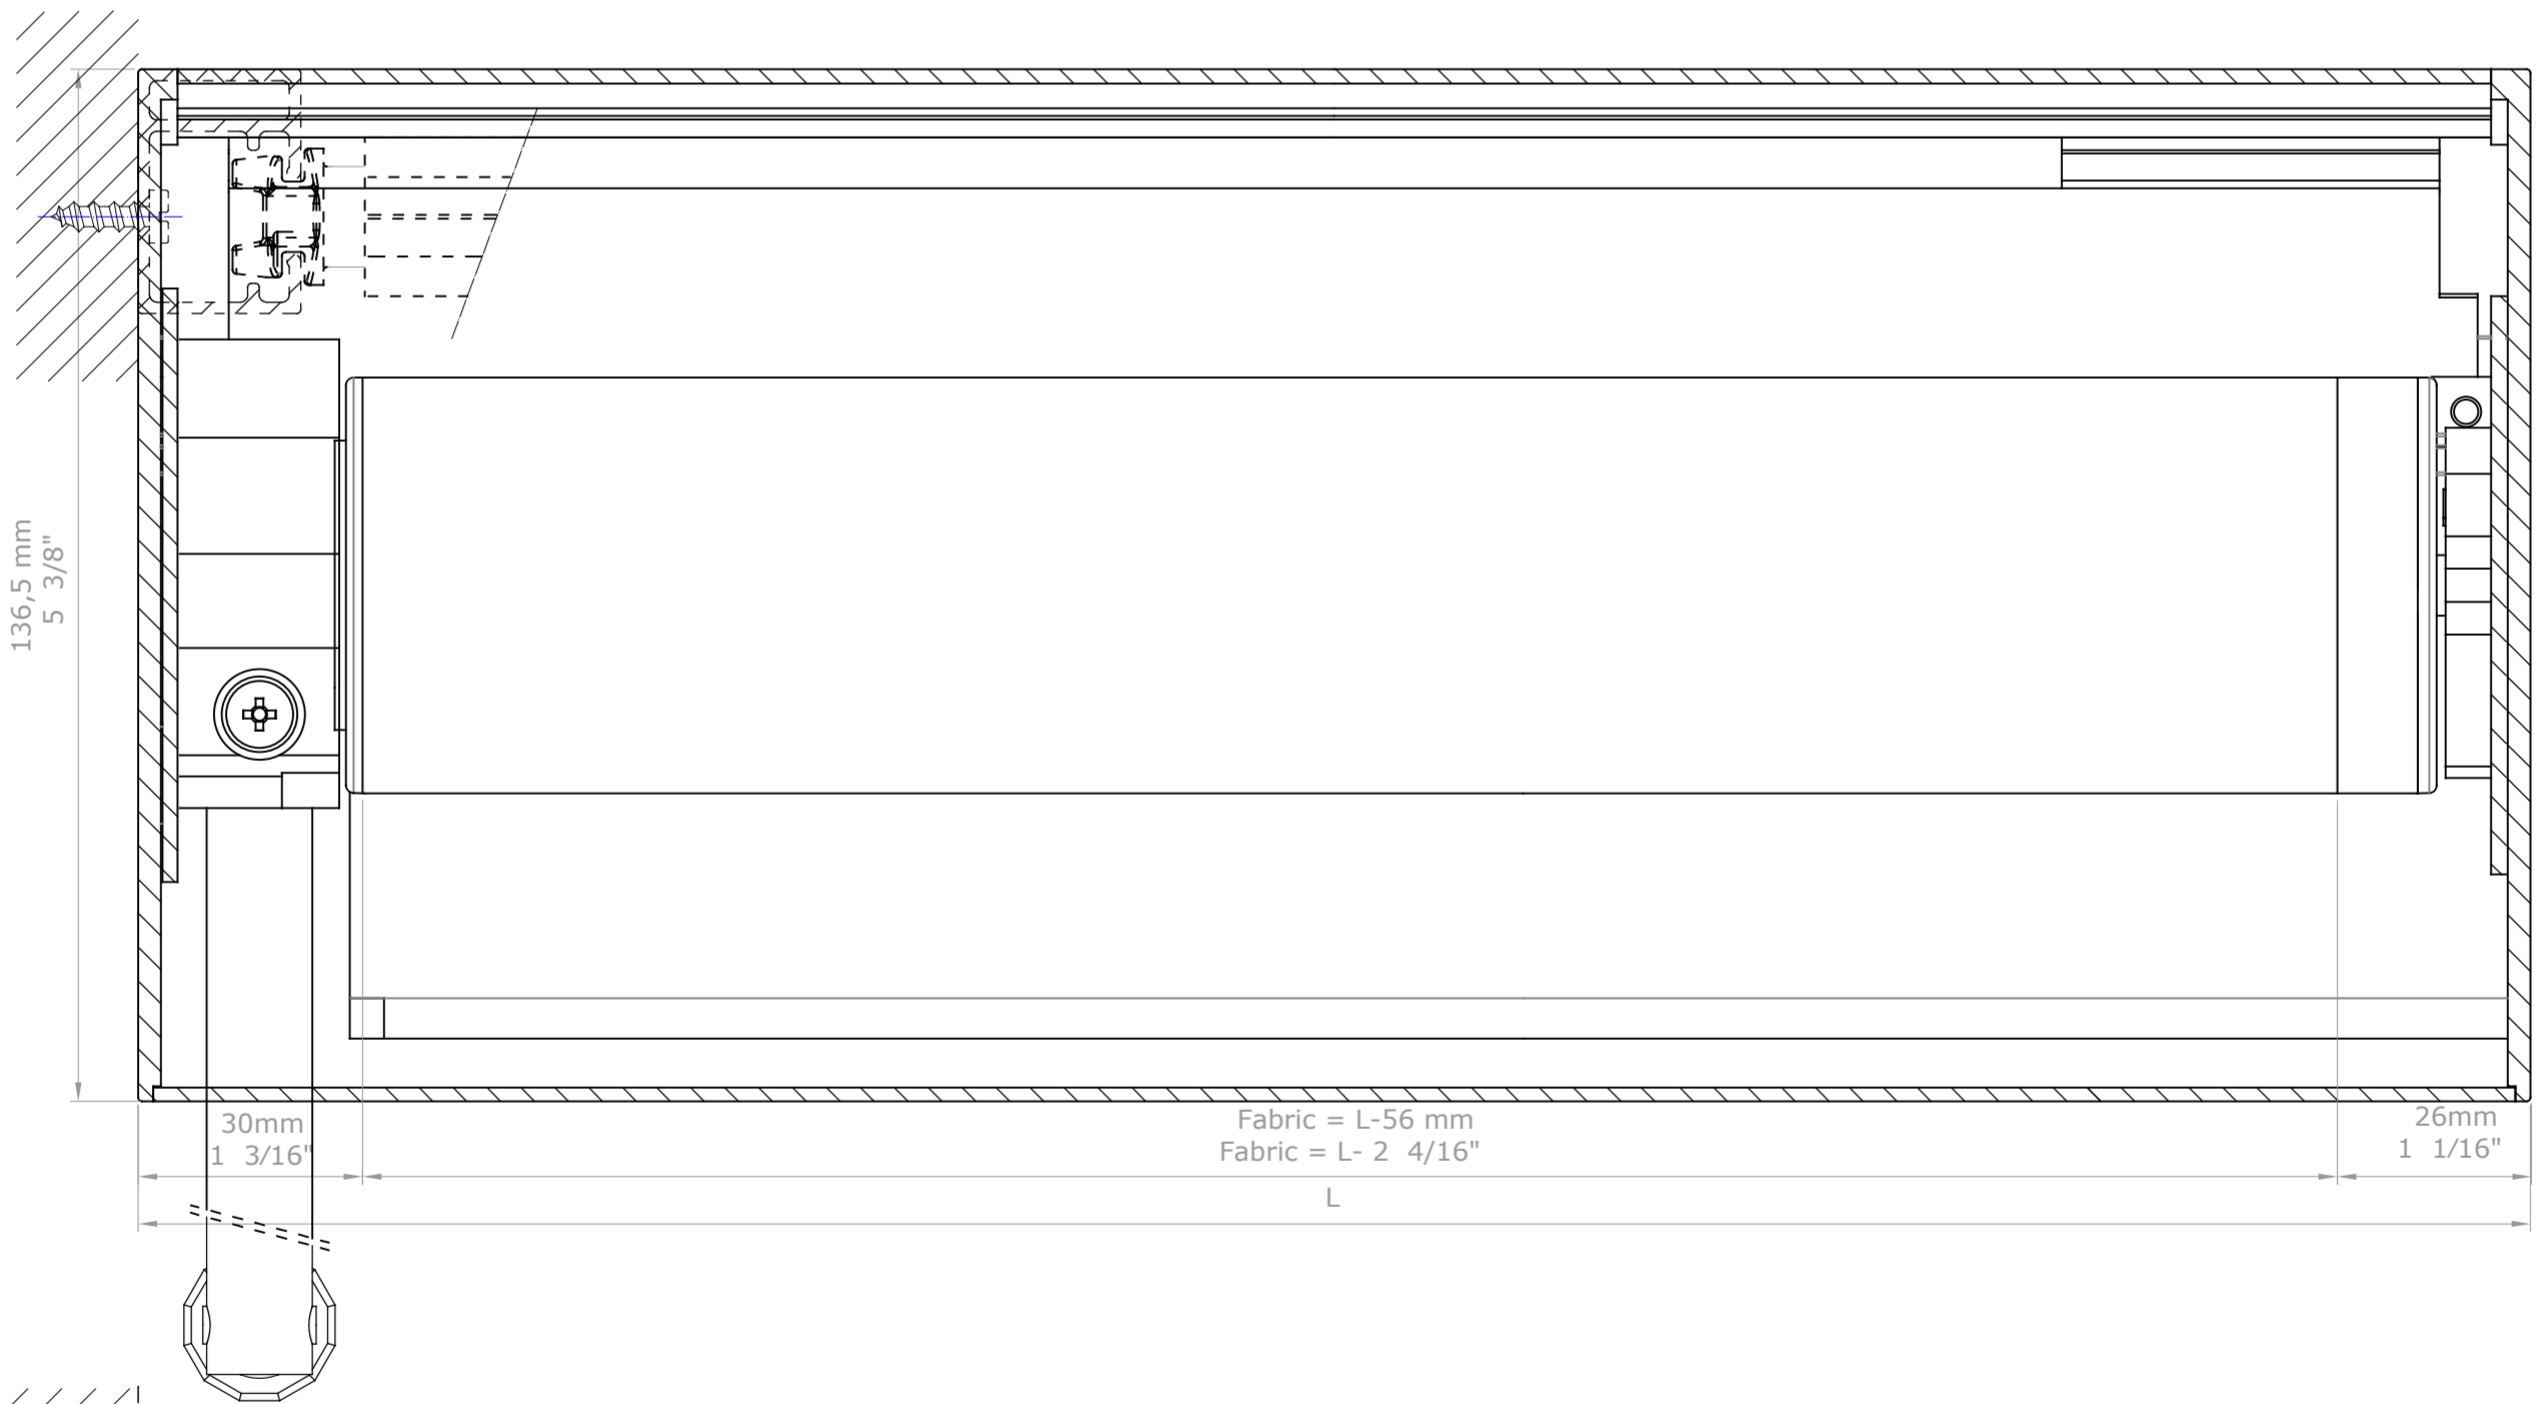



D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	18-12-2017	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind in Box B-Box 5" crank U-302 guided Aluminum side channel guided lateral installation Mechanism: Crank Bottom rail: Round hembar 3/4" (Ø20mm) Tube 2 9/16" (Ø65mm)		
1/1			

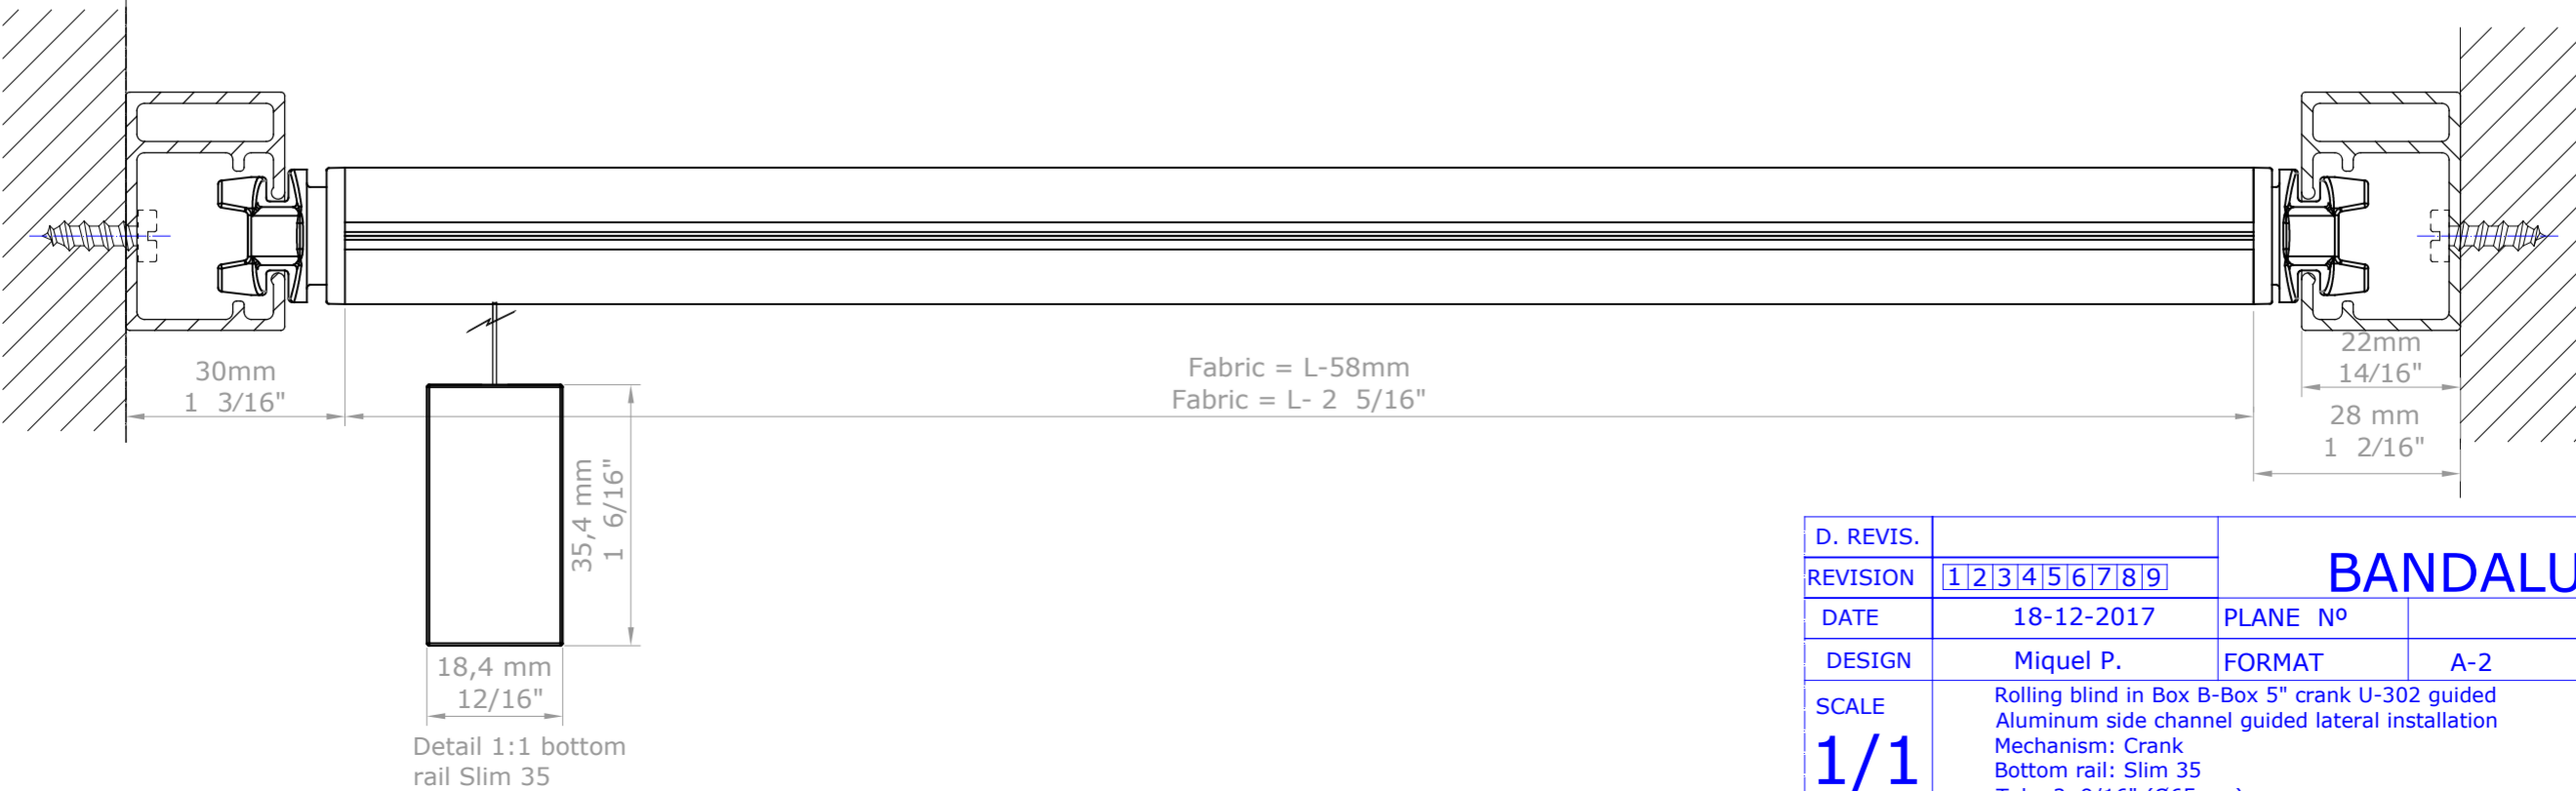




D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	18-12-2017	PLANE Nº	
DESIGN	Miquel P.	FORMAT	A-2
SCALE	Rolling blind in Box B-Box 5" crank U-302 guided Aluminum side channel guided lateral installation Mechanism: Crank Bottom rail: Round hembar 3/4" (Ø20mm) Tube 2 9/16" (Ø65mm)		
1/1			

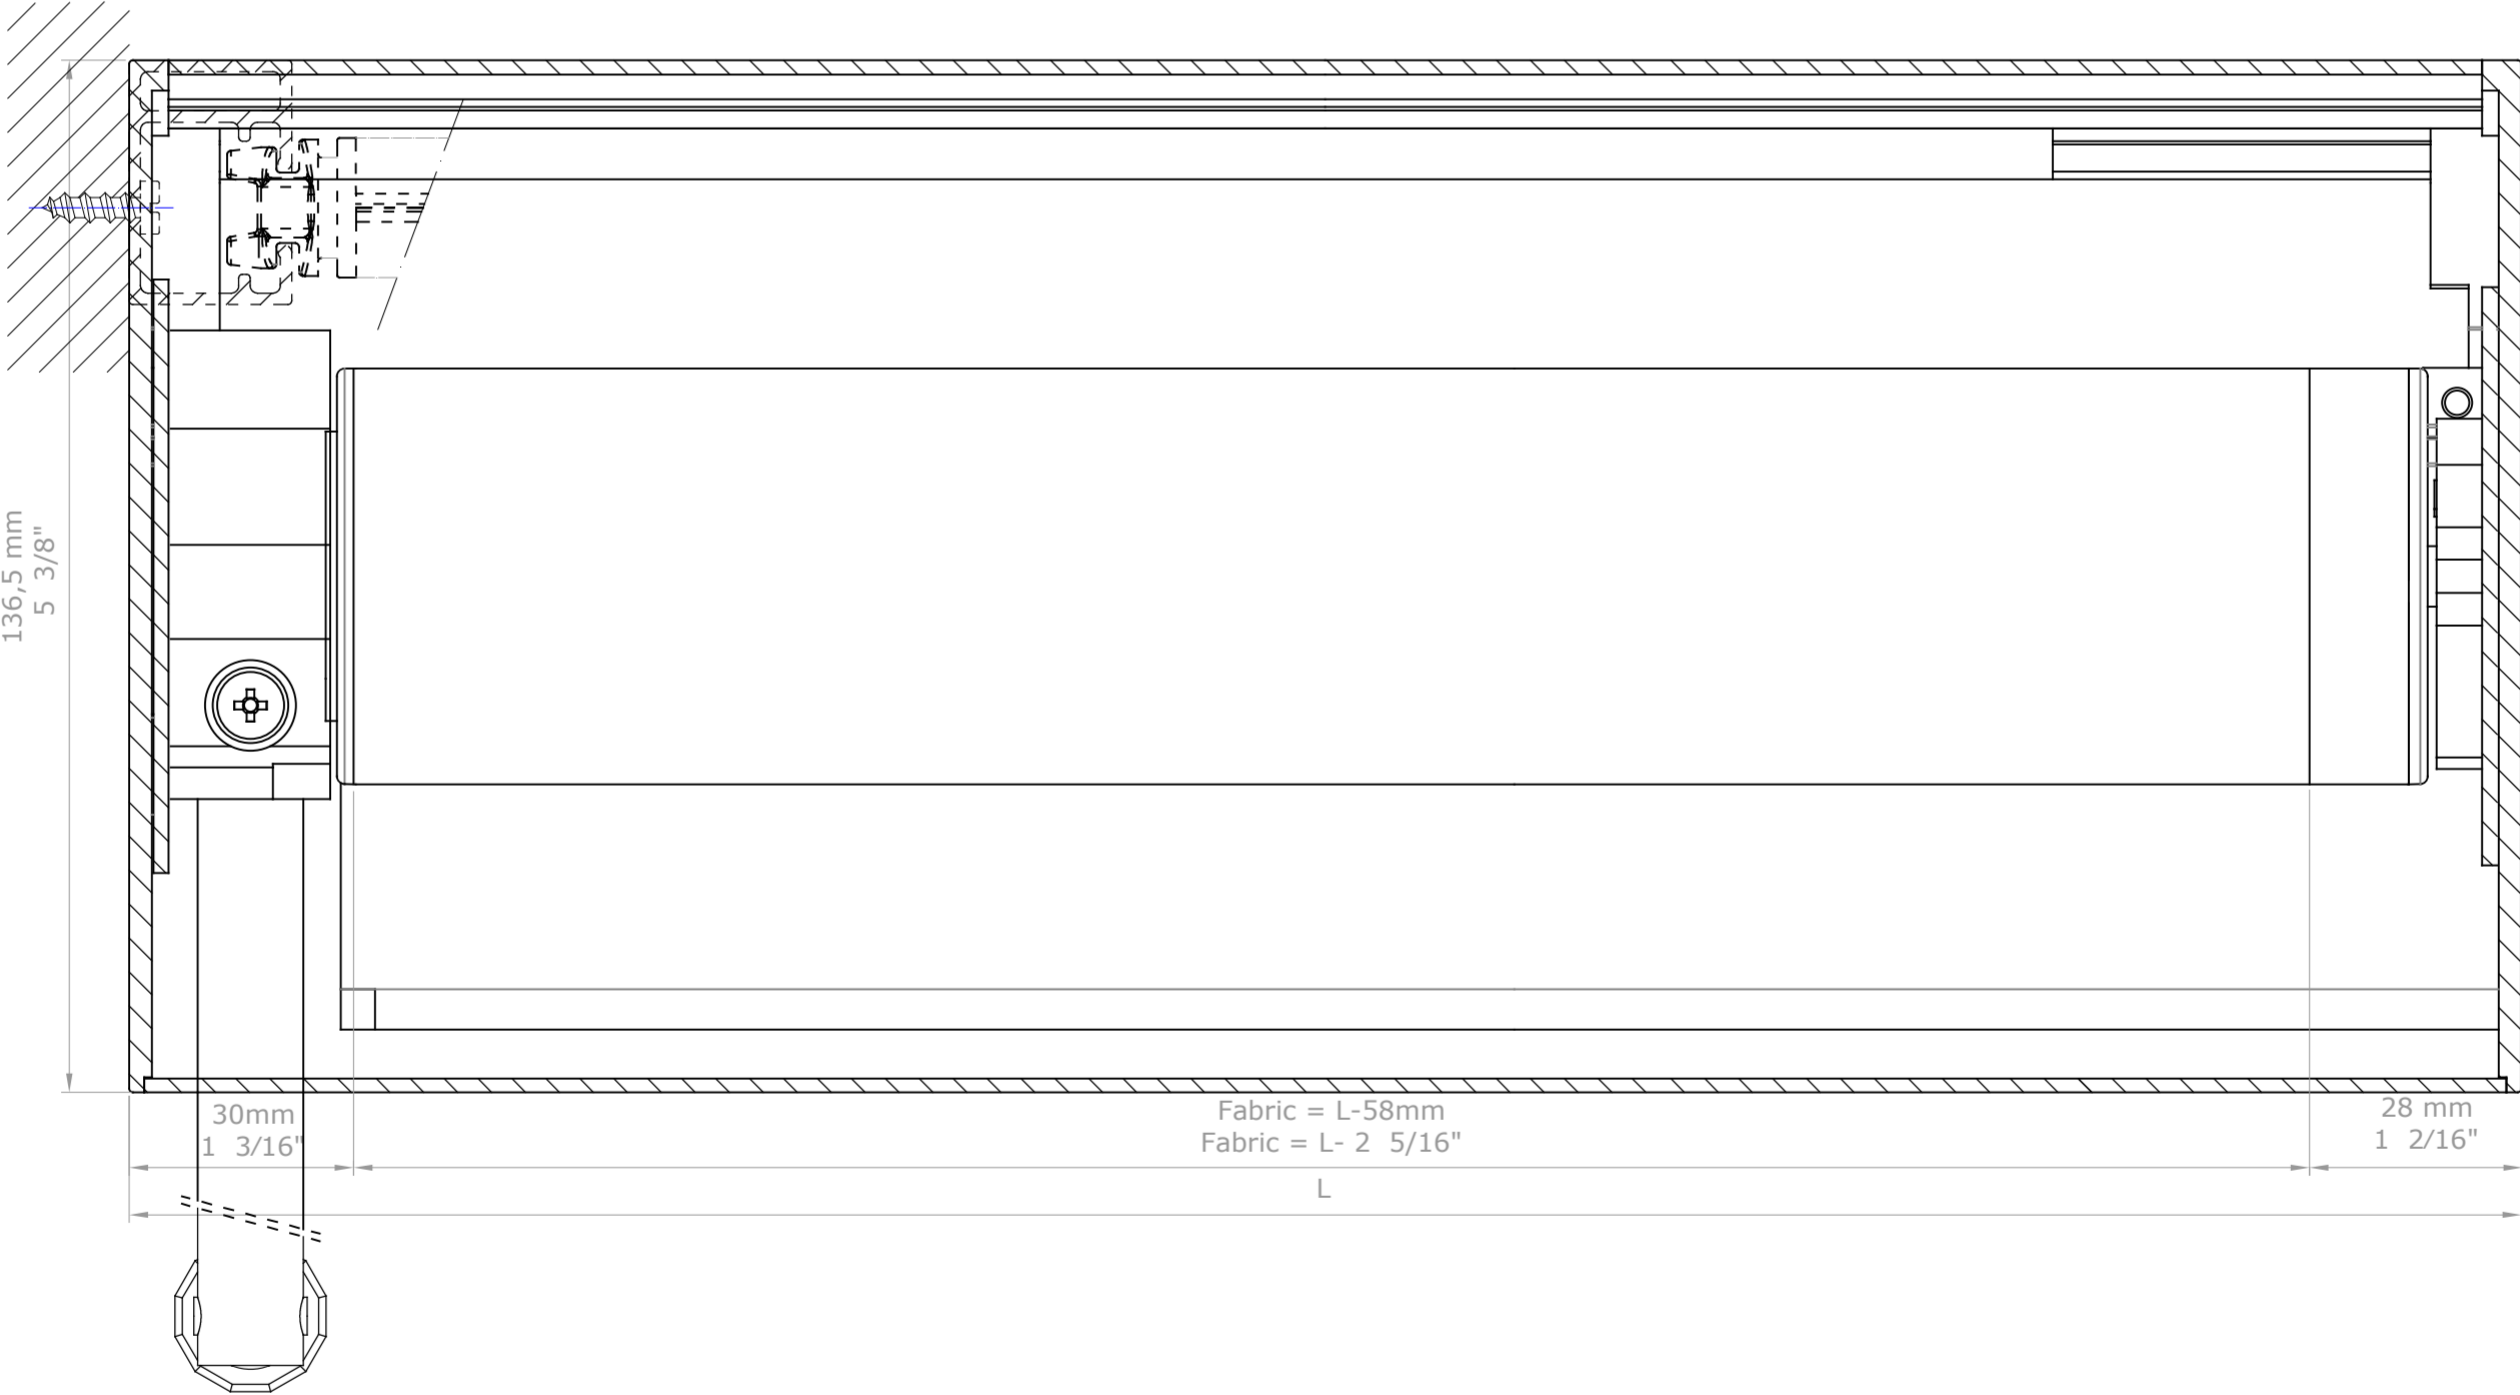



D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	18-12-2017	PLANE Nº	
DESIGN	Miquel P.	FORMAT	A-2
SCALE	Rolling blind in Box B-Box 5" crank U-302 guided Aluminum side channel guided lateral installation Mechanism: Crank Bottom rail: Slim 35 Tube 2 9/16" (Ø65mm)		
1/1			

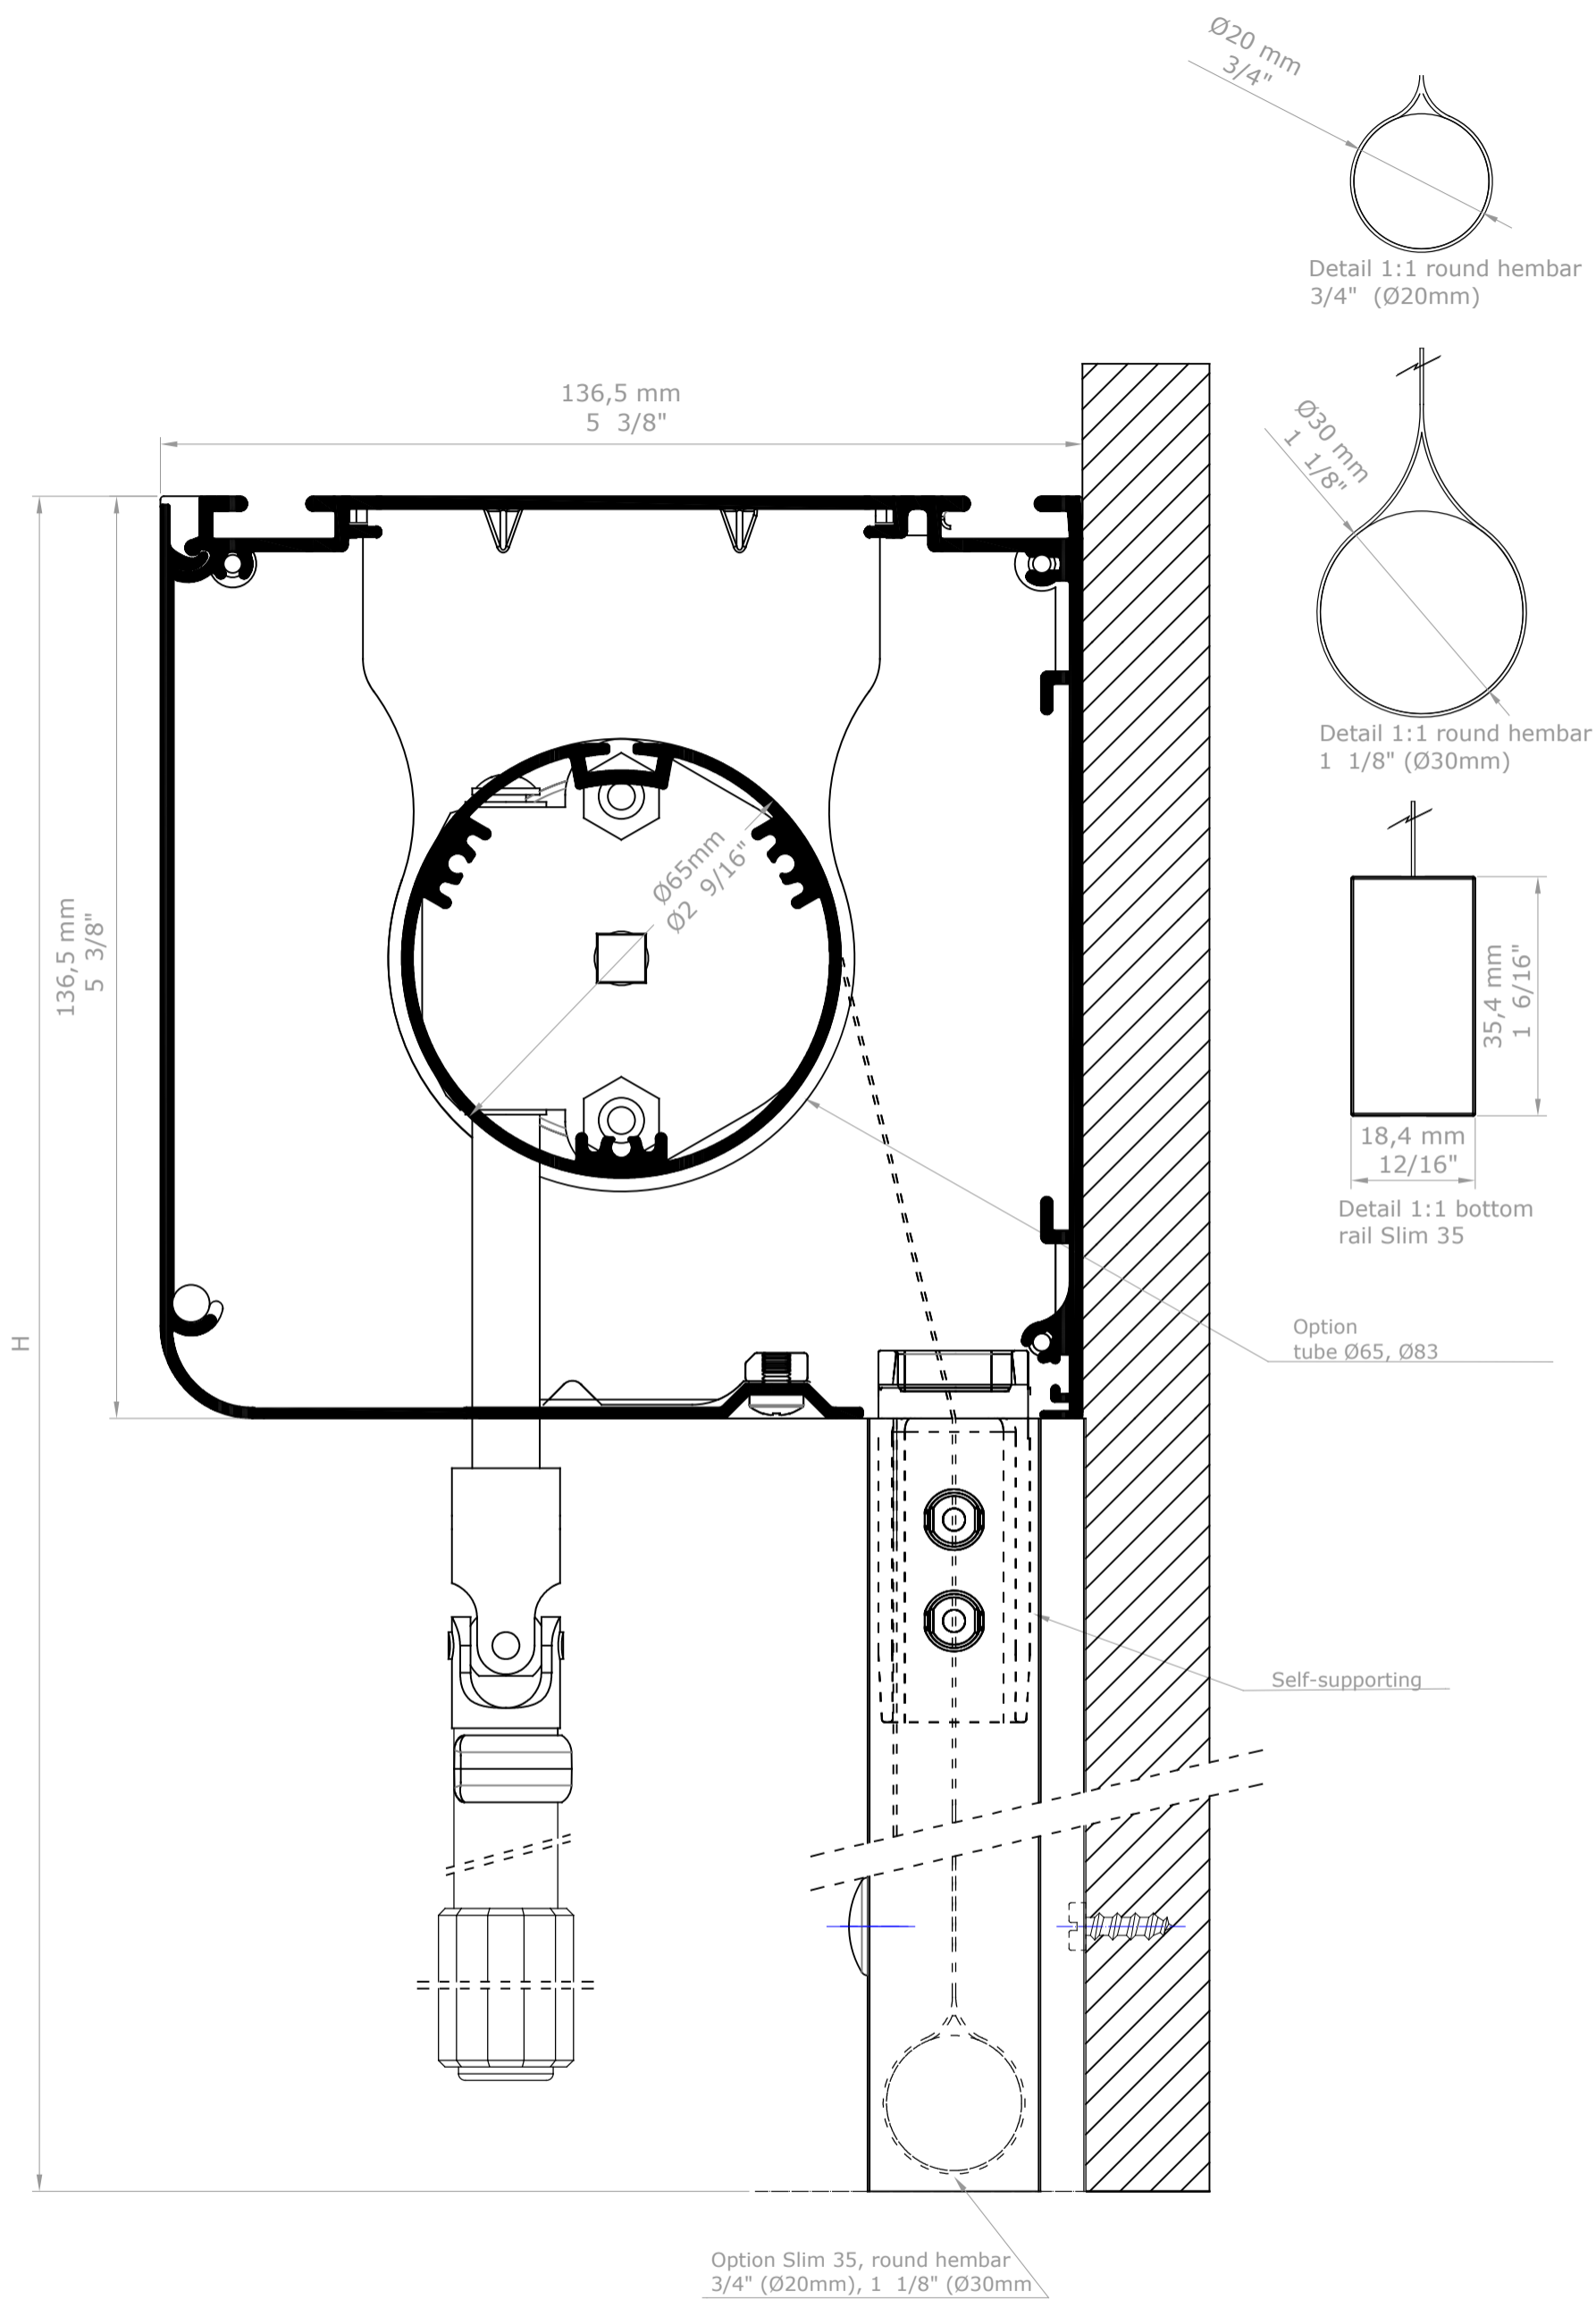

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	18-12-2017	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-3
SCALE	Rolling blind in Box B-Box 5" crank U-302 guided Aluminum side channel guided front installation Mechanism:Crank Bottom rail: Round hembar 3/4" (Ø20mm) Tube 2 9/16" (Ø65mm)		
1/1			

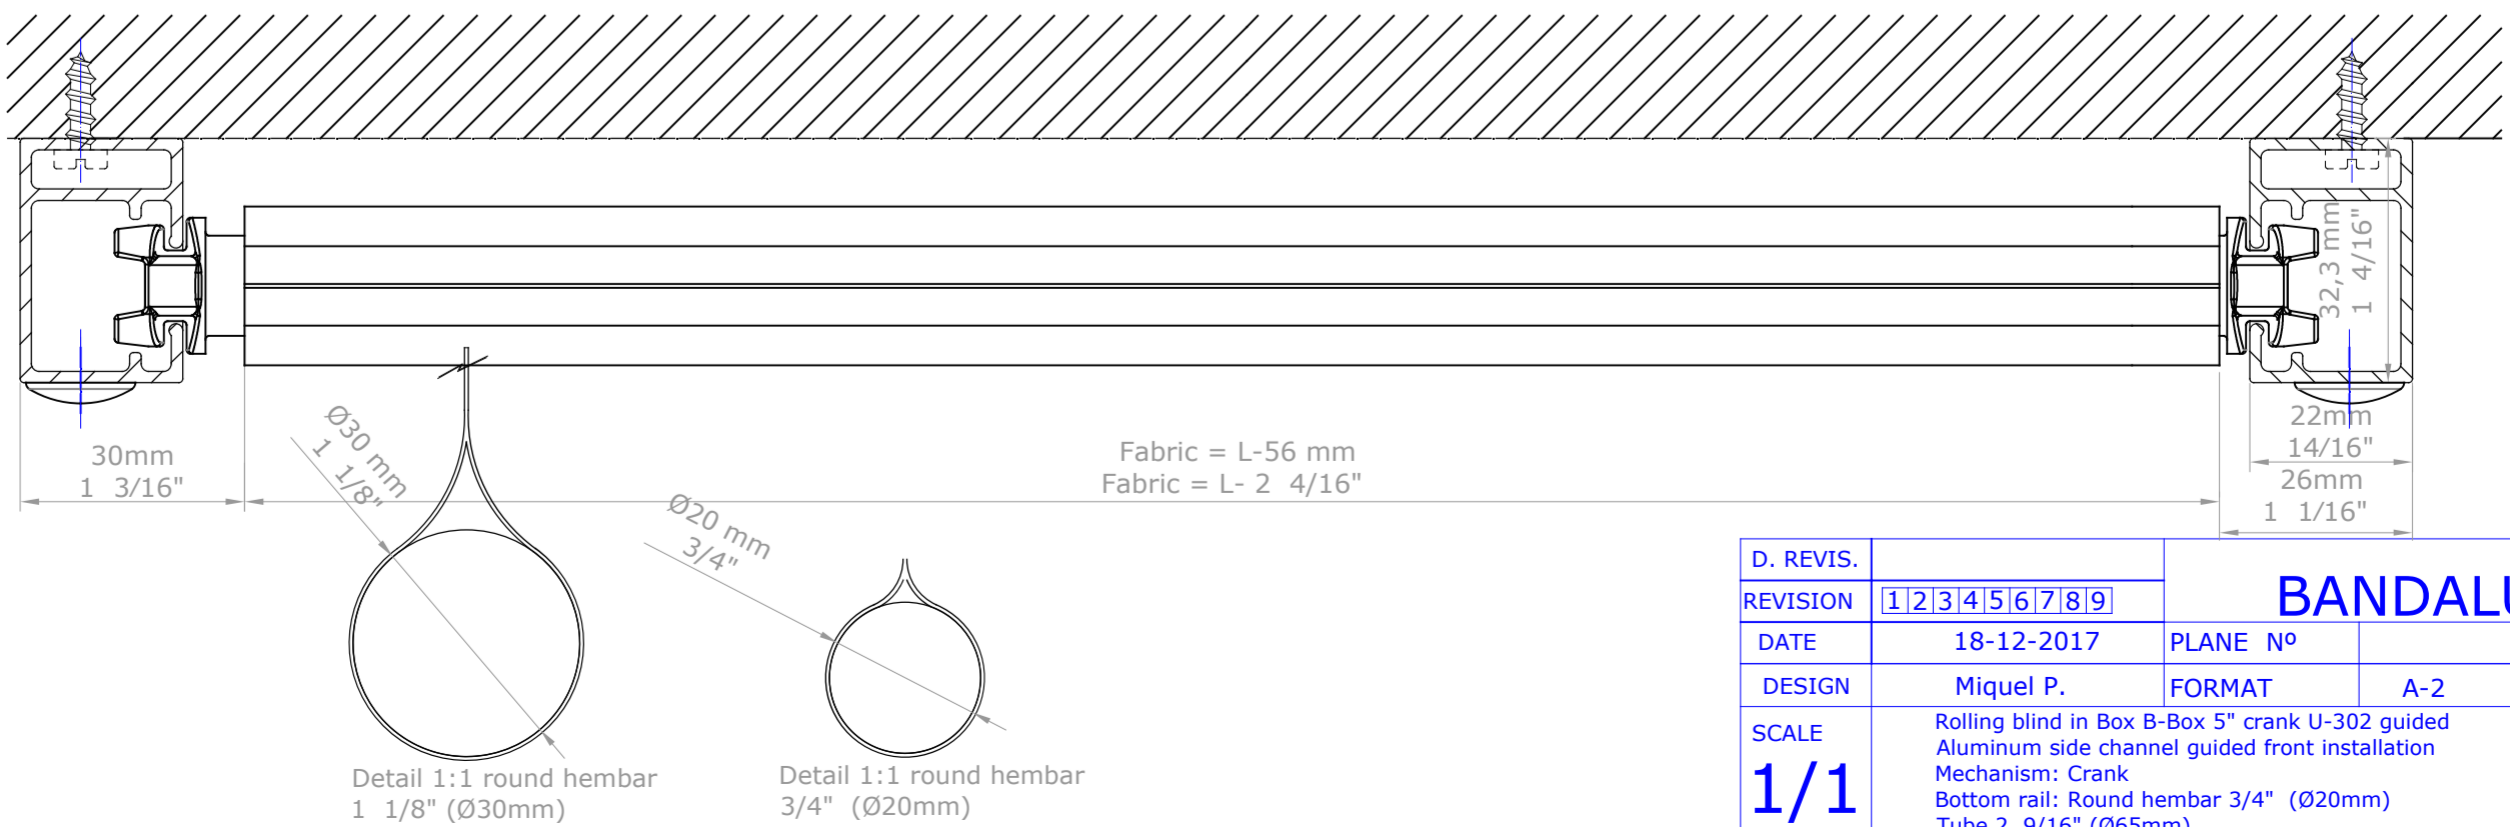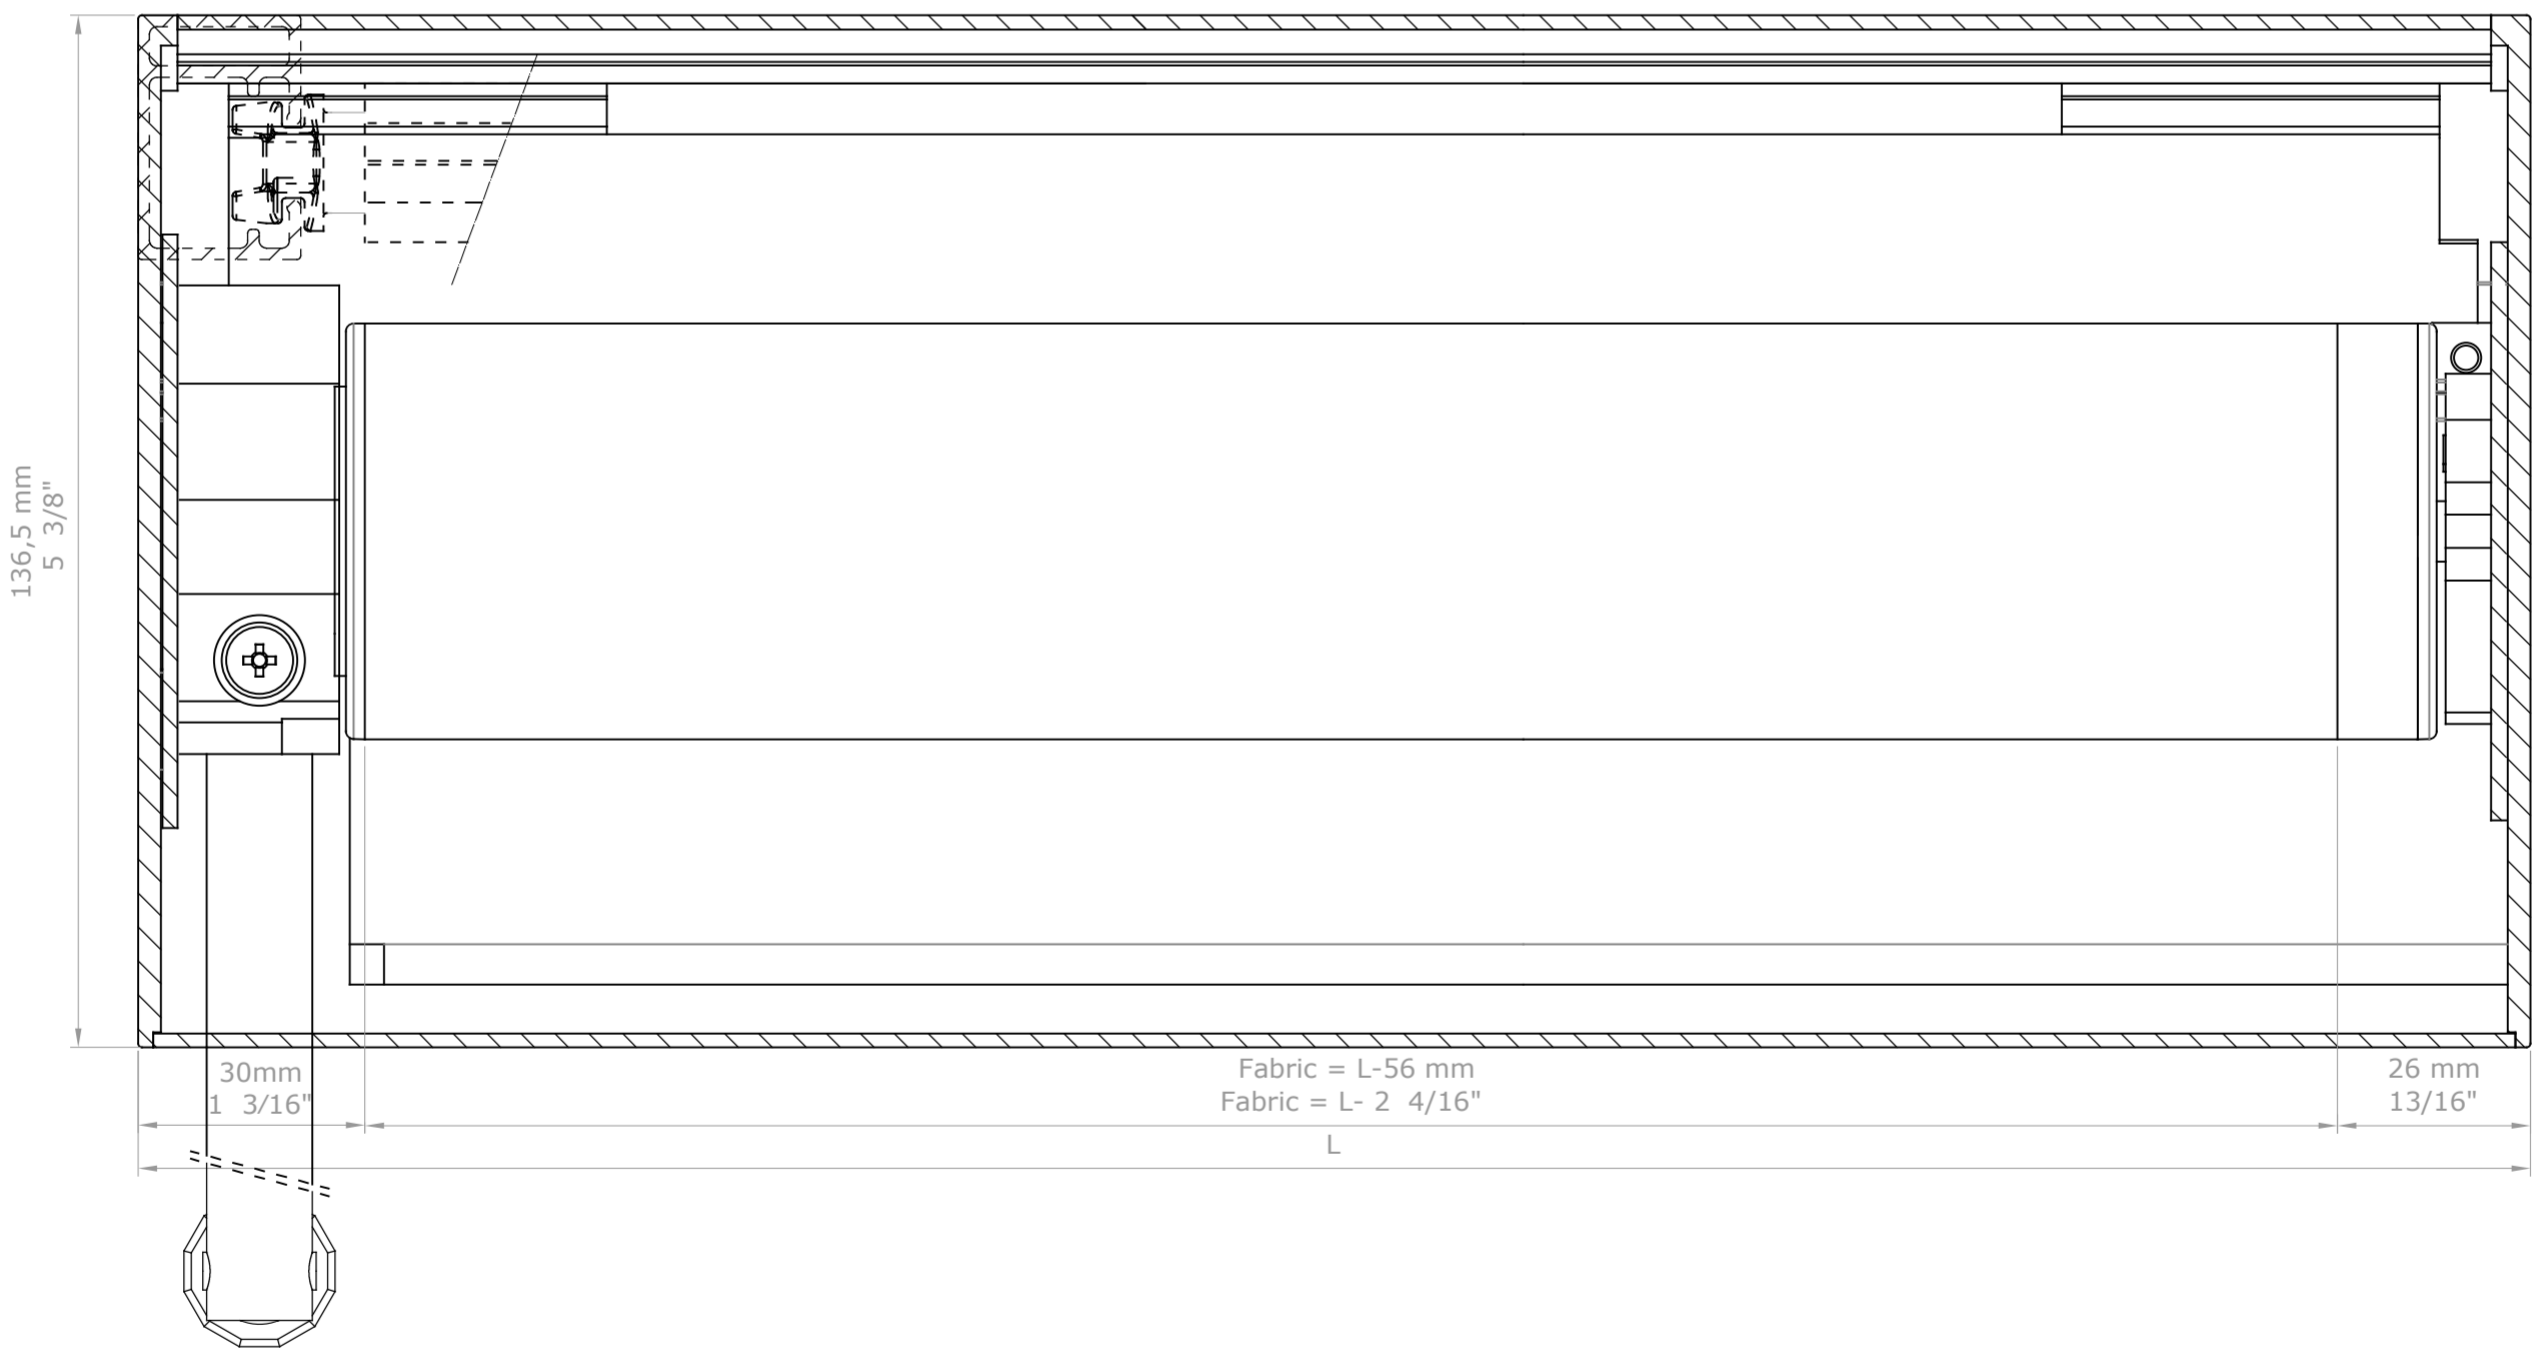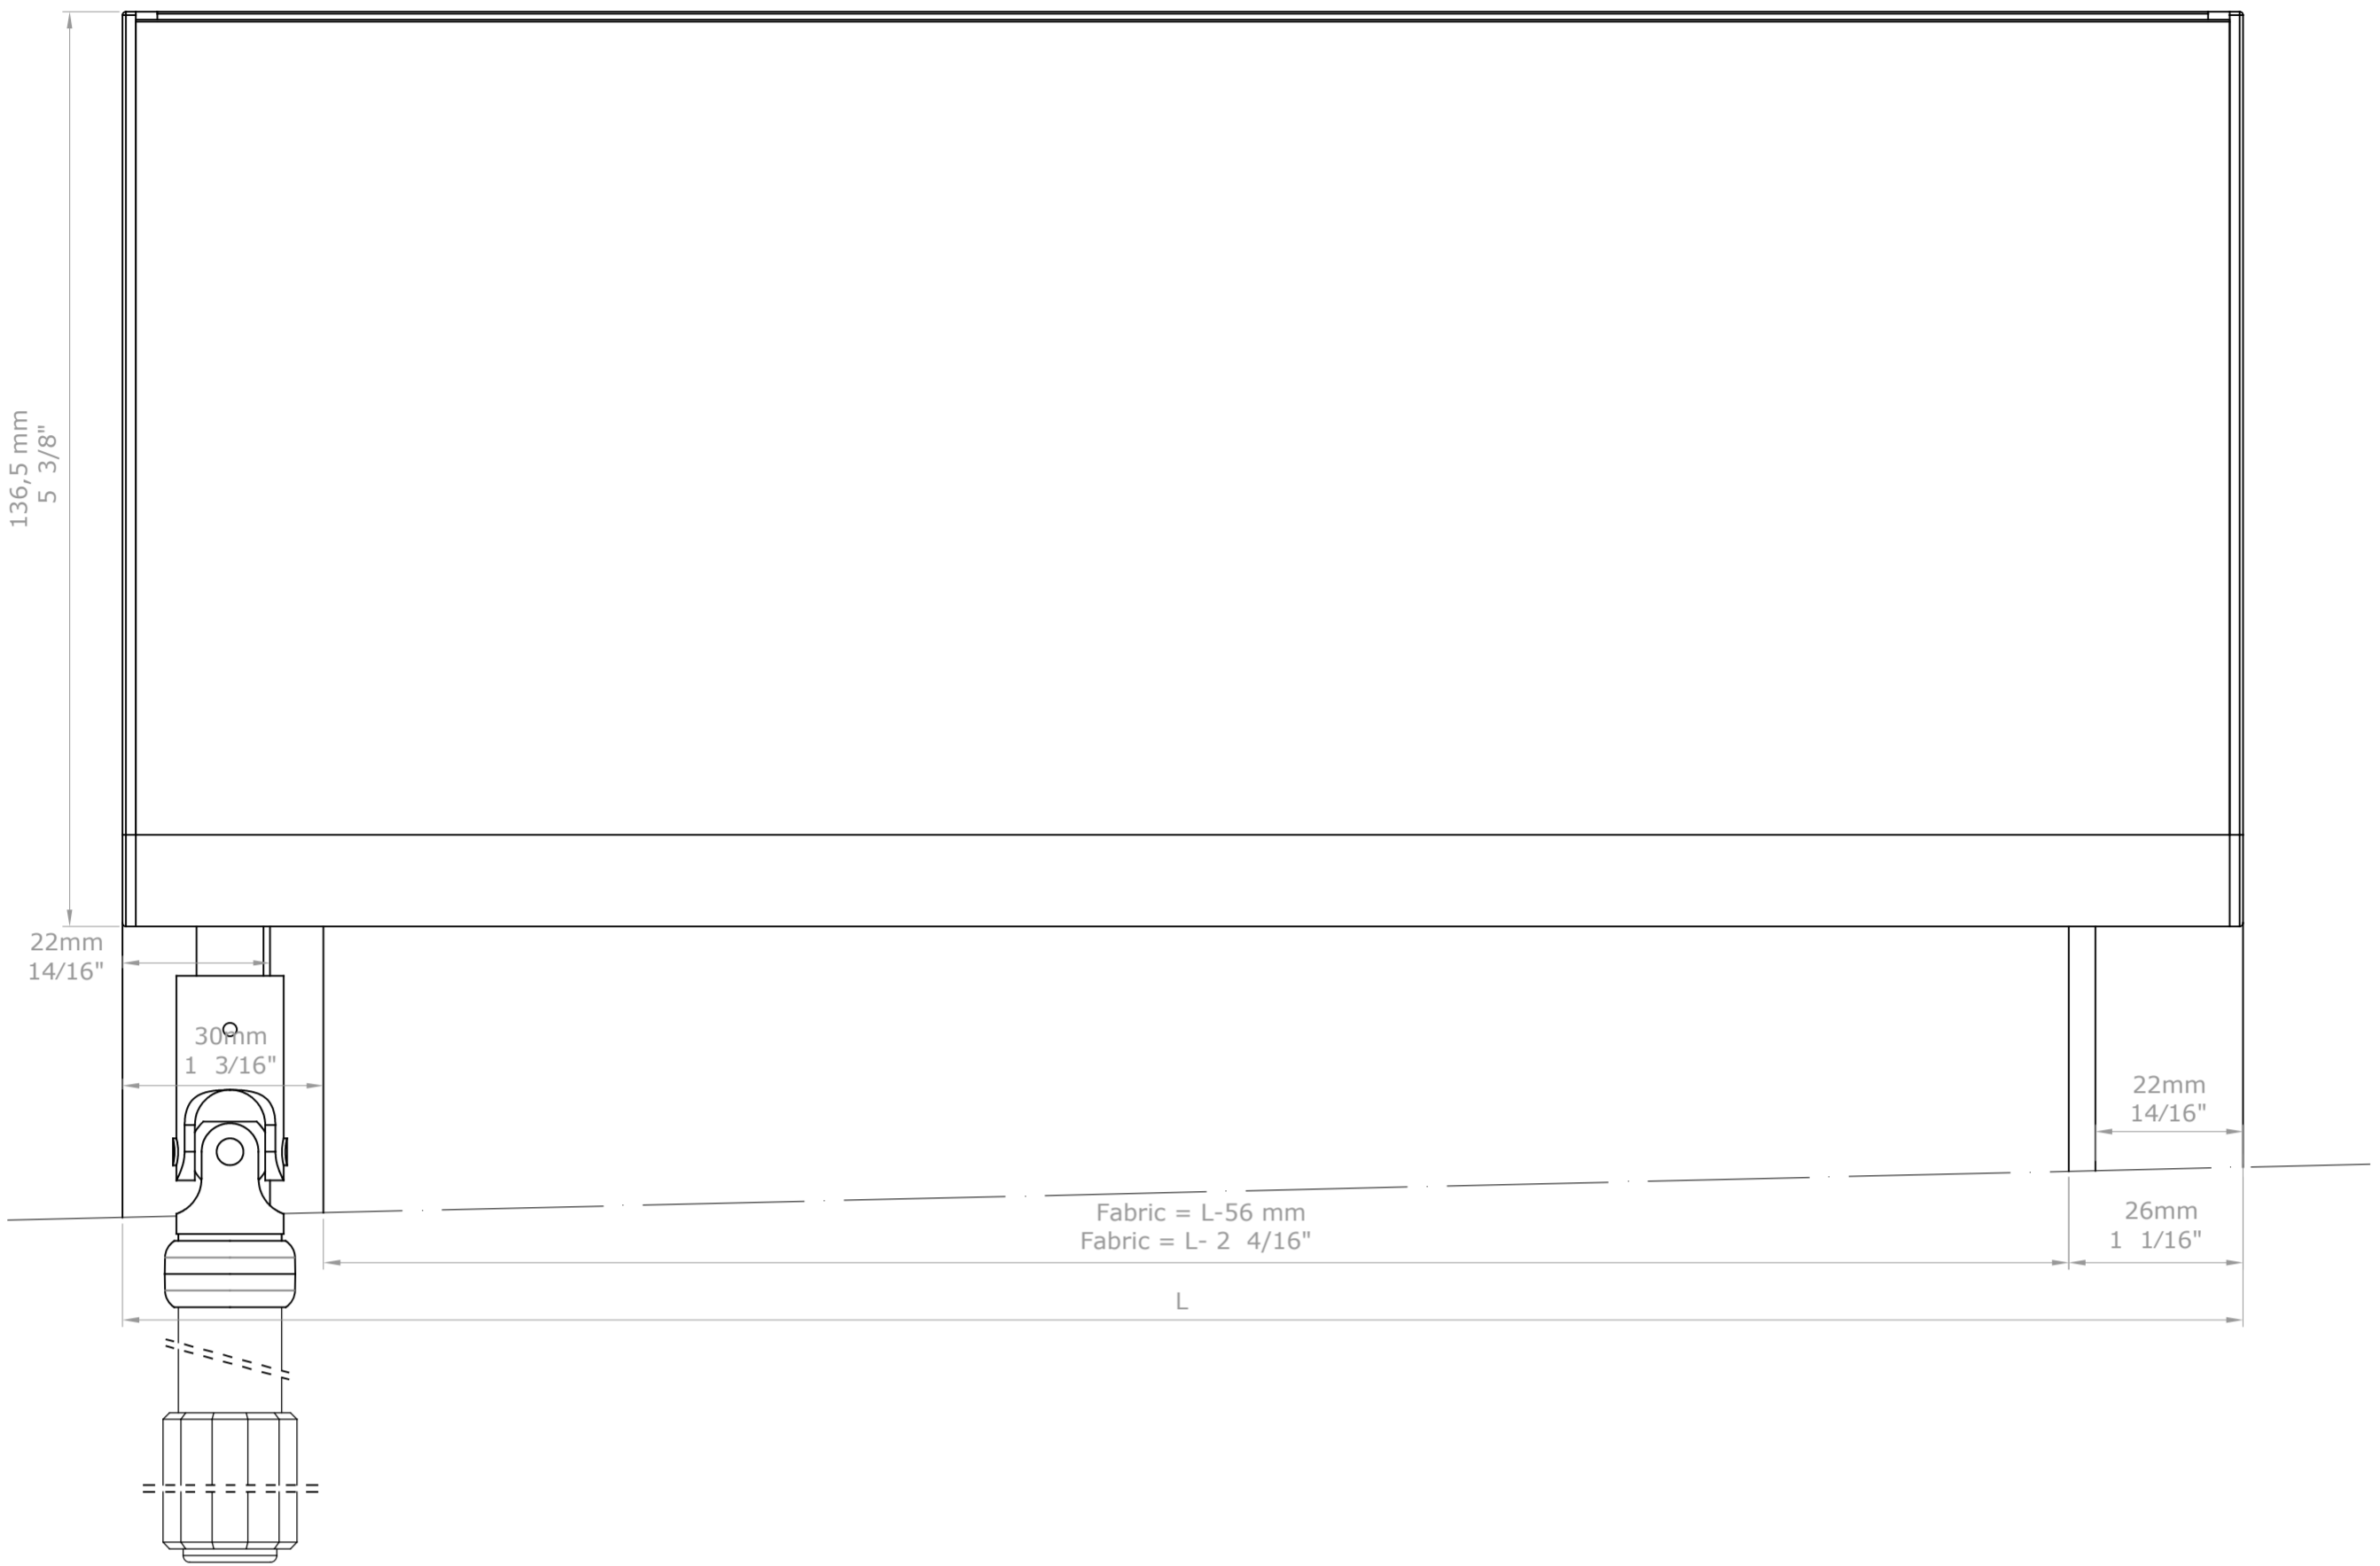

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	18-12-2017	PLANE N°	
DESIGN	Miquel P.	FORMAT	A-2
SCALE	Rolling blind in Box B-Box 5" crank U-302 guided Aluminum side channel guided front installation Mechanism: Crank Bottom rail: Round hembar 3/4" (Ø20mm) Tube 2 9/16" (Ø65mm)		
1/1			

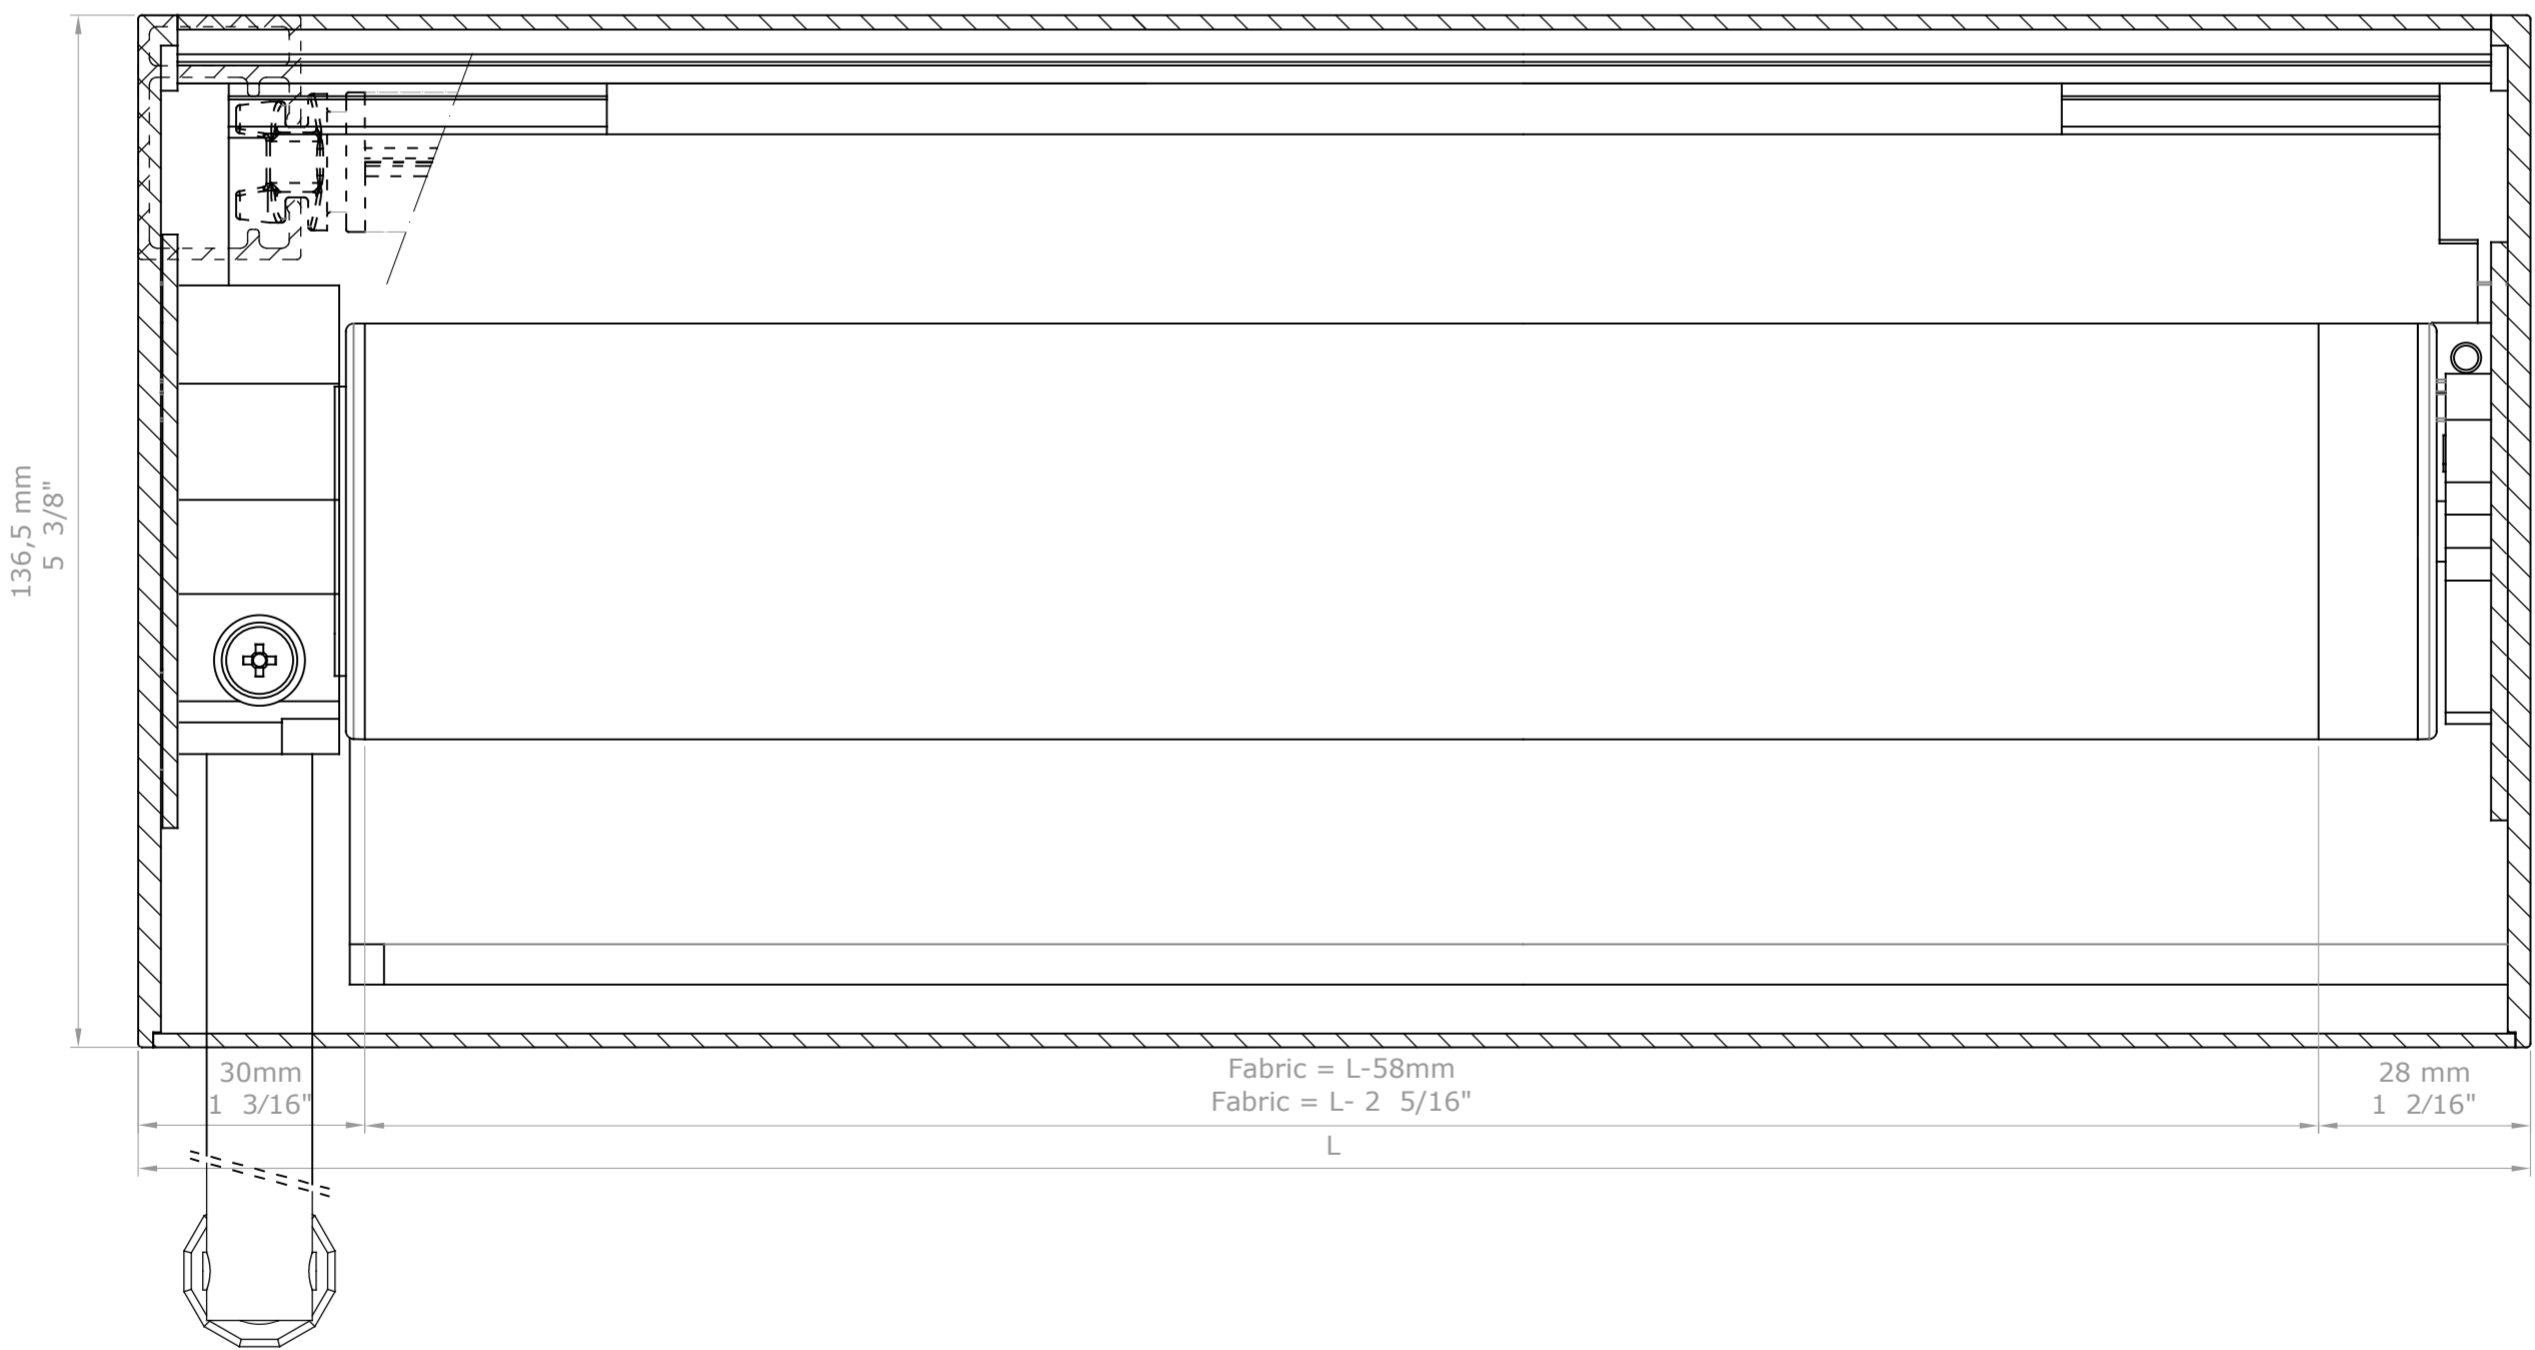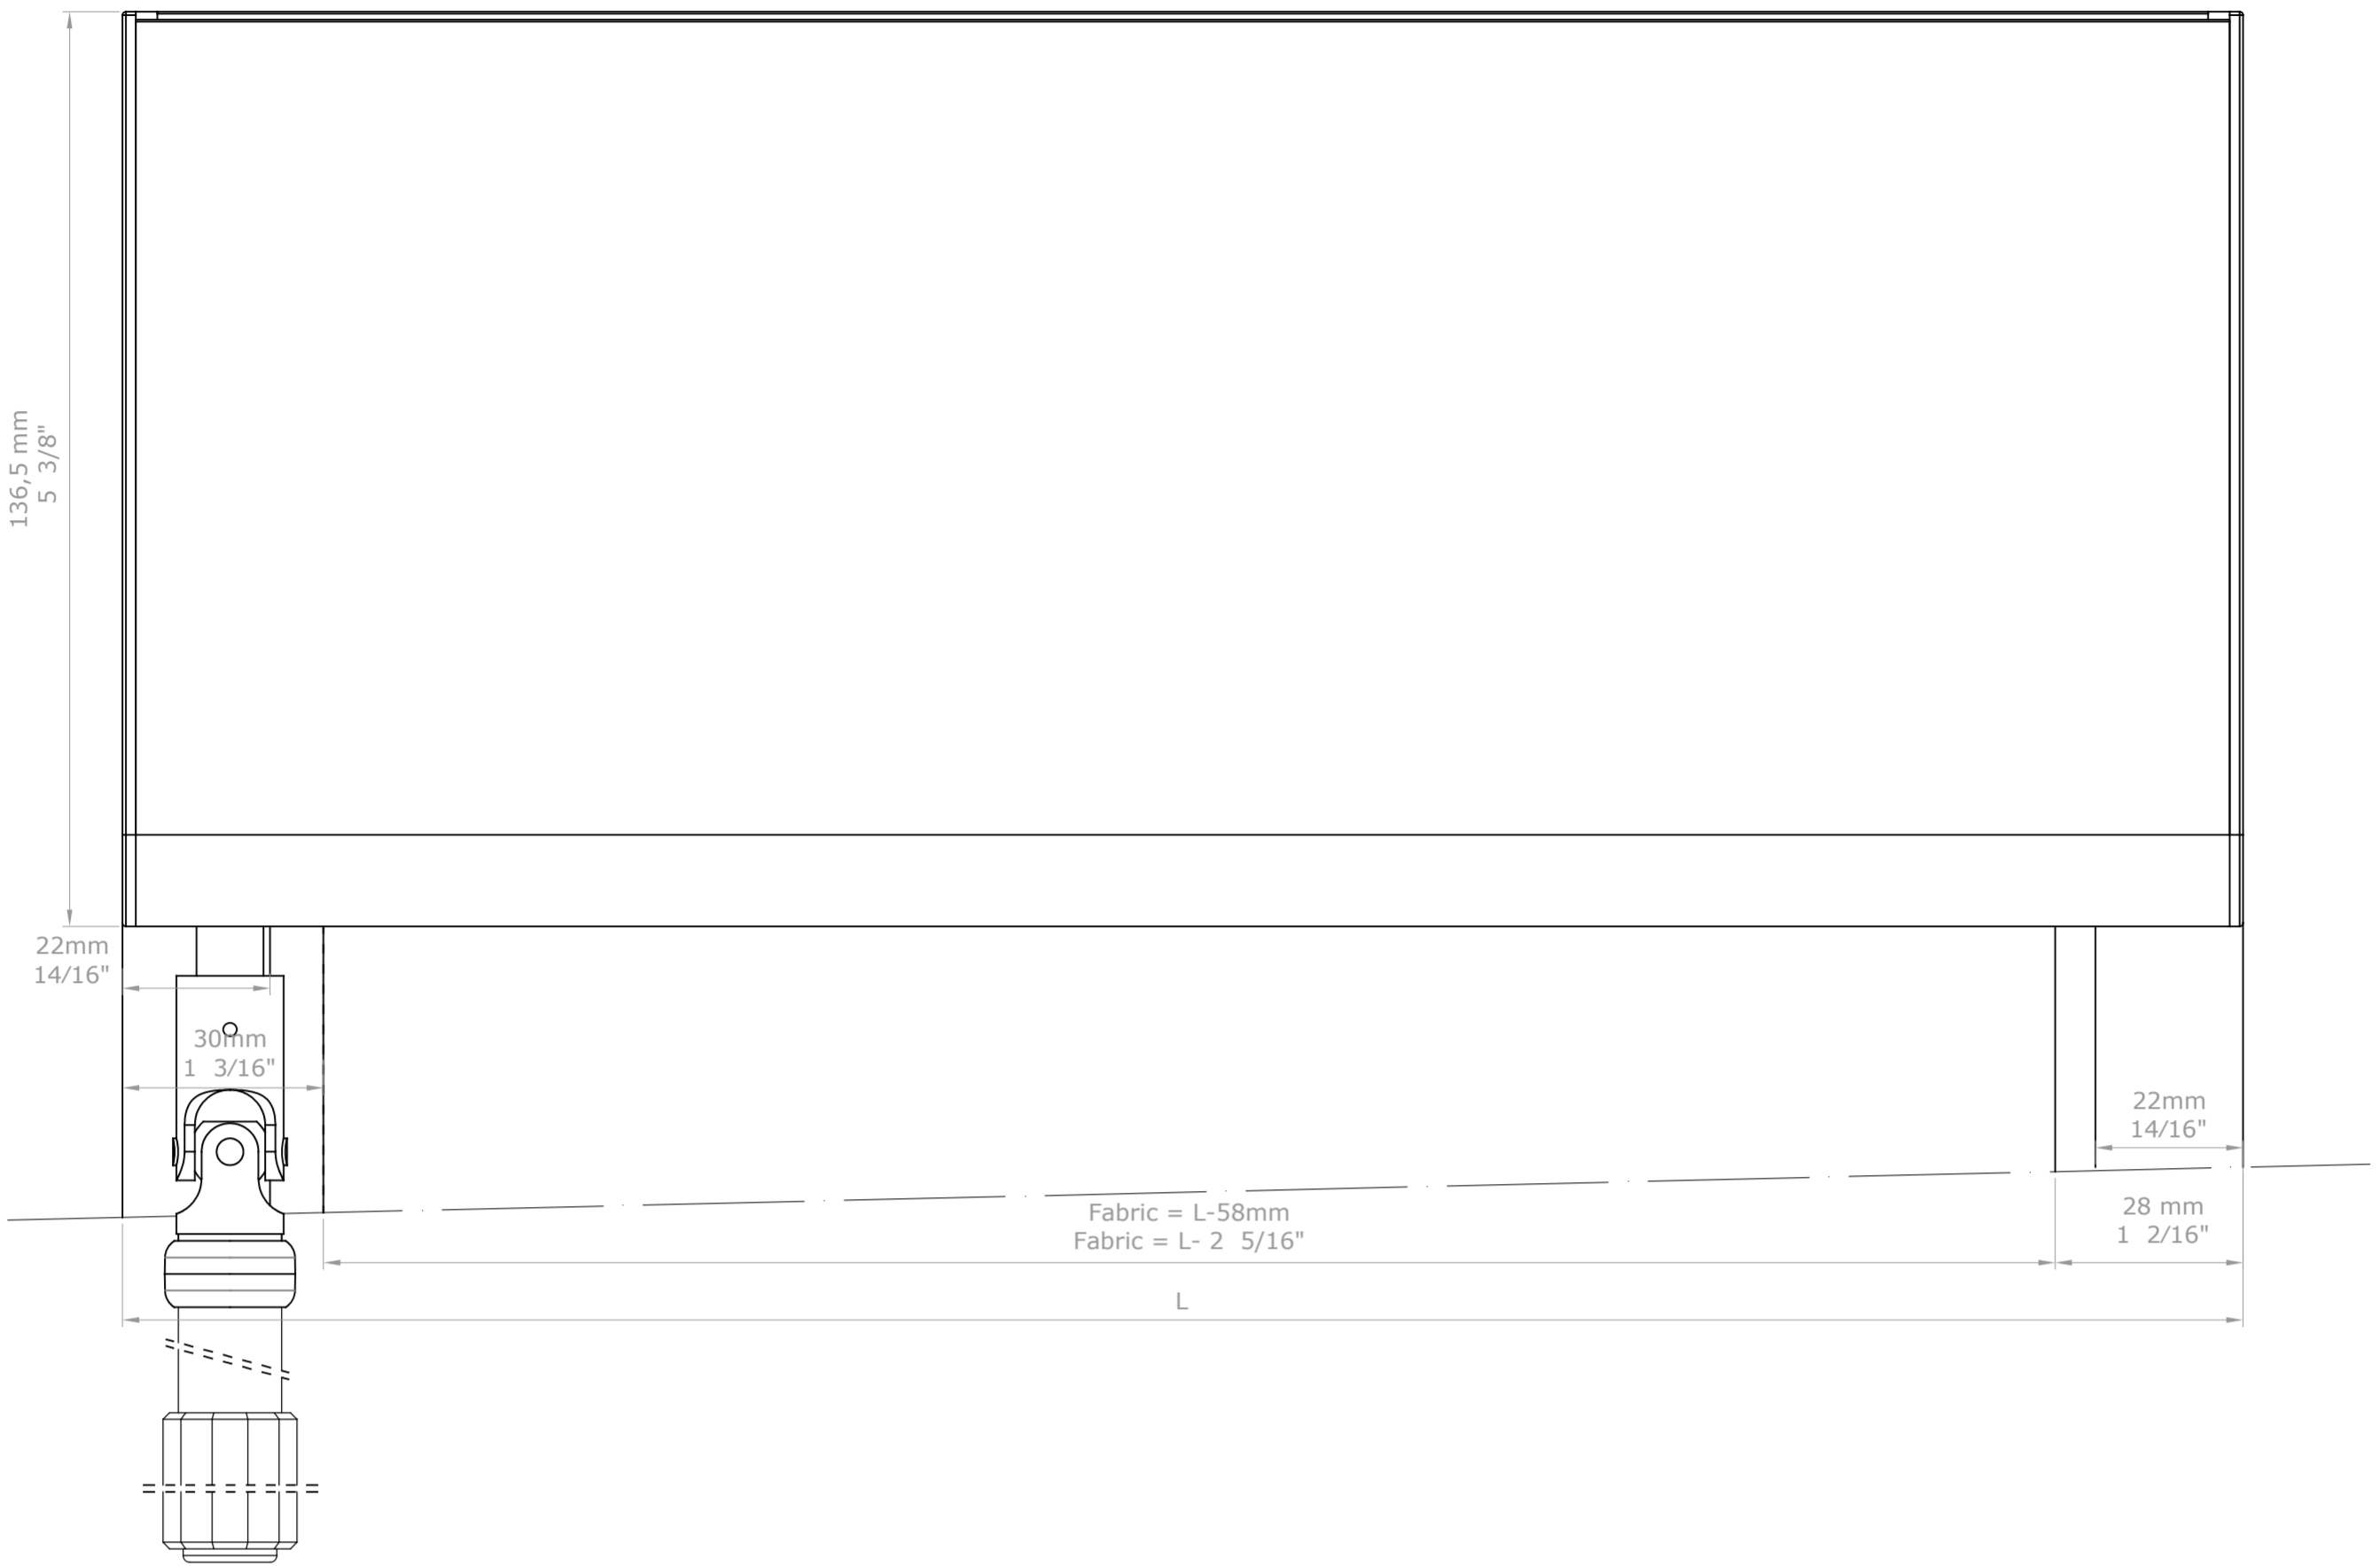

D. REVIS.		BANDALUX	
REVISION	123456789		
DATE	18-12-2017	PLANE Nº	
DESIGN	Miquel P.	FORMAT	A-2
SCALE	Rolling blind in Box B-Box 5" crank U-302 guided Aluminum side channel guided front installation Mechanism: Crank Bottom rail: Slim 35 Tube 2 9/16" (Ø65mm)		
1/1			